


CR80/85 FORK SPRING INSTALLATION INSTRUCTIONS

Remove forks from motorcycle. Record the rebound adjuster screw position and turn it counterclockwise until it stops. Loosen and remove fork caps from the tube. Slide the fork tube down. Pull the fork spring to access the lock nut. Hold the Lock nut with a wrench and remove the fork cap from the piston rod. Remove the fork spring and replace with the BBR fork spring.

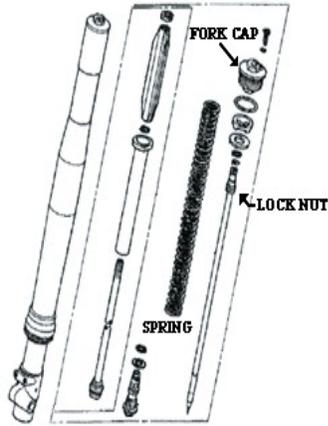

Check to make sure your oil level is 95mm. Please see your owners manual for instructions on doing this. Tighten the fork cap onto the lock nut to 14 lbf-ft. Thread the fork cap into the fork tube and torque to 25lbf-ft. Reset the rebound adjuster screw position and reinstall the forks. Torque the fork tube pinch bolts to 16lbf-ft.


BBR

MOTORSPORTS (253) 631-8233 · www.bbrrmotorsports.com



CR80/85 FORK SPRING INSTALLATION INSTRUCTIONS

Remove forks from motorcycle. Record the rebound adjuster screw position and turn it counterclockwise until it stops. Loosen and remove fork caps from the tube. Slide the fork tube down. Pull the fork spring to access the lock nut. Hold the Lock nut with a wrench and remove the fork cap from the piston rod. Remove the fork spring and replace with the BBR fork spring.

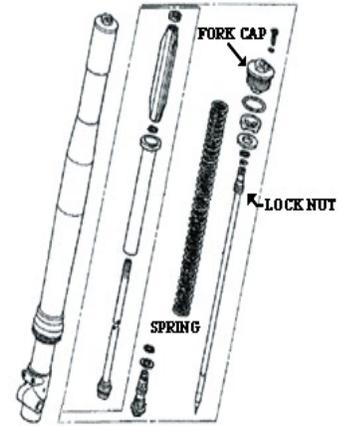

Check to make sure your oil level is 95mm. Please see your owners manual for instructions on doing this. Tighten the fork cap onto the lock nut to 14 lbf-ft. Thread the fork cap into the fork tube and torque to 25lbf-ft. Reset the rebound adjuster screw position and reinstall the forks. Torque the fork tube pinch bolts to 16lbf-ft.


BBR

MOTORSPORTS (253) 631-8233 · www.bbrrmotorsports.com



CR80/85 FORK SPRING INSTALLATION INSTRUCTIONS

Remove forks from motorcycle. Record the rebound adjuster screw position and turn it counterclockwise until it stops. Loosen and remove fork caps from the tube. Slide the fork tube down. Pull the fork spring to access the lock nut. Hold the Lock nut with a wrench and remove the fork cap from the piston rod. Remove the fork spring and replace with the BBR fork spring.

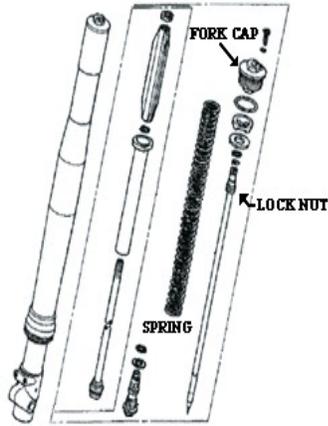

Check to make sure your oil level is 95mm. Please see your owners manual for instructions on doing this. Tighten the fork cap onto the lock nut to 14 lbf-ft. Thread the fork cap into the fork tube and torque to 25lbf-ft. Reset the rebound adjuster screw position and reinstall the forks. Torque the fork tube pinch bolts to 16lbf-ft.


BBR

MOTORSPORTS (253) 631-8233 · www.bbrrmotorsports.com



CR80/85 FORK SPRING INSTALLATION INSTRUCTIONS

Remove forks from motorcycle. Record the rebound adjuster screw position and turn it counterclockwise until it stops. Loosen and remove fork caps from the tube. Slide the fork tube down. Pull the fork spring to access the lock nut. Hold the Lock nut with a wrench and remove the fork cap from the piston rod. Remove the fork spring and replace with the BBR fork spring.

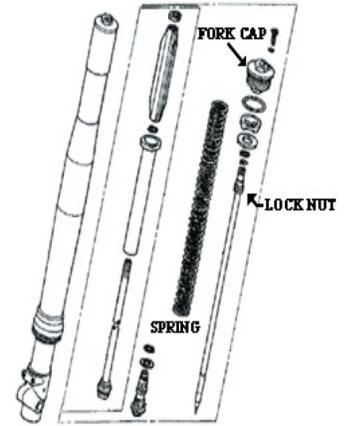

Check to make sure your oil level is 95mm. Please see your owners manual for instructions on doing this. Tighten the fork cap onto the lock nut to 14 lbf-ft. Thread the fork cap into the fork tube and torque to 25lbf-ft. Reset the rebound adjuster screw position and reinstall the forks. Torque the fork tube pinch bolts to 16lbf-ft.

BBR

MOTORSPORTS (253) 631-8233 · www.bbrrmotorsports.com

