

# BBR Rear Disc Brake Kit adapter

This adapter kit allows the use of the BBR Rear Disc Brake Kit with the OEM KLX/DRZ110 swingarm or the BBR Super Pro rear suspension kit. See the Rear Disc Brake Kit instructions for details not shown here.


Copyright © 2005 BBR Motorsports, Inc 1028 4th St. SW - A, Auburn, WA 98001 1-888-MOTO-BBR



1. Install silver caliper mount if using stock swingarm. If using BBR swingarm, use the red caliper mount. The stock swingarm will use the stock swingarm bolt. The BBR Super Pro swingarm will use the bolt provided in this kit (gold above).



2. After removing the swingarm bolt and stock brake pedal and spring, install the master cylinder mount. If using the BBR Super Pro swingarm, be sure to use the spacer provided (see exploded view). Note that the mount is held in place by the brake pedal spring pin (welded on the frame). Torque bolt to spec (see owners manual).


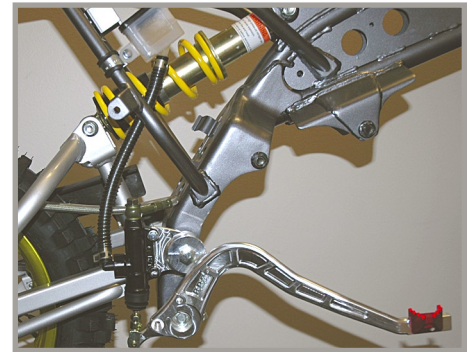


3. Install the master cylinder and reservoir (with included rubber clamp) as shown above. Install the disc brake arm onto your BBR brake pedal using the 6mm countersunk ahead screws. Install the brake pedal with the stock pedal o-rings and bolt. Install the brake return spring (see exploded view below).

4. If using the stock swingarm, install brake arm with stock hardware. Note: The caliper mount is countersunk on the back side for the bolt head. Continue with installation as per the Rear Disc Brake Instructions.



Complete assembly shown on stock swingarm

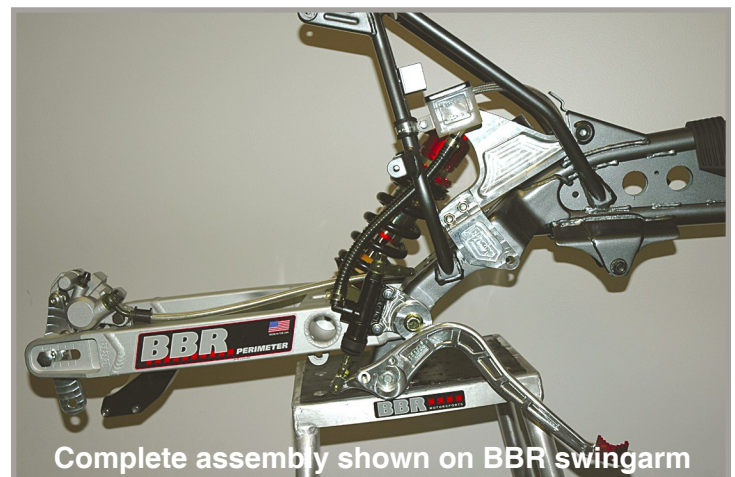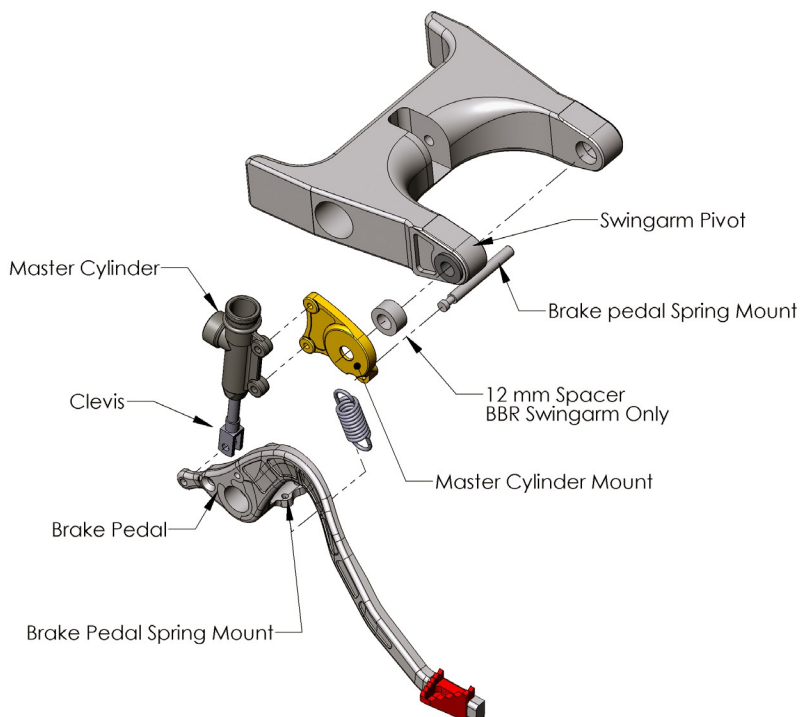

Complete assembly shown on BBR swingarm